


FLOWER BOX ASSEMBLY

Items for STEP 1:

- (1) 2" x 4" x 18 $\frac{5}{8}$ " board

Pre-drill and countersink board at dimensions shown.

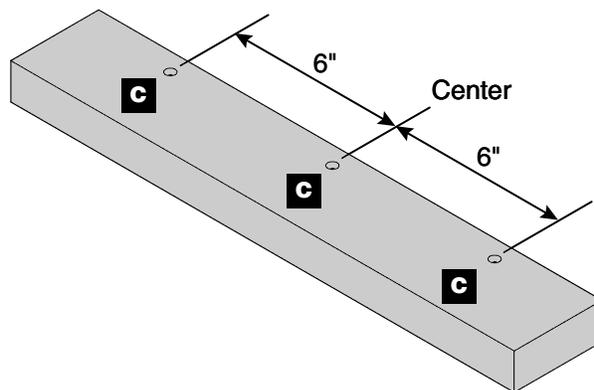


SEE PAGE 4 FOR
HOLE PATTERNS

Items for STEP 2:

- (1) 2" x 4" x 18 $\frac{5}{8}$ " board
- (2) #8 x 2 $\frac{1}{2}$ " deck screws

Attach board as shown. Secure with #8 x 2 $\frac{1}{2}$ " deck screws.

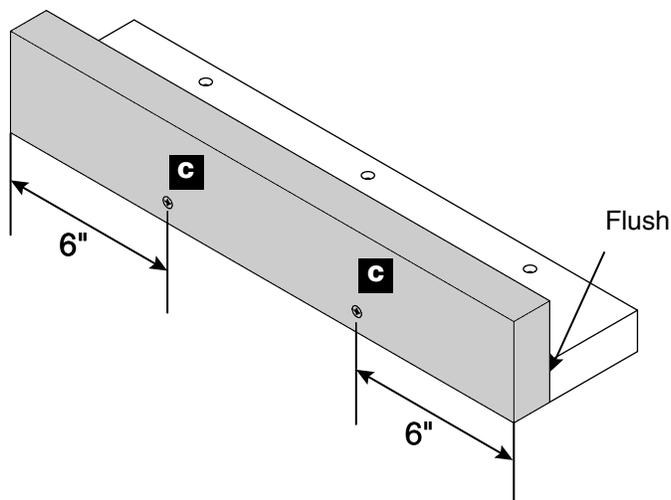


SEE PAGE 4 FOR
HOLE PATTERNS

Items for STEP 3:

- (2) 2" x 6" x 4 $\frac{5}{8}$ " boards
- (6) #8 x 2 $\frac{1}{2}$ " deck screws

Attach 2" x 6" x 4 $\frac{5}{8}$ " as shown. Secure with #8 x 2 $\frac{1}{2}$ " deck screws.

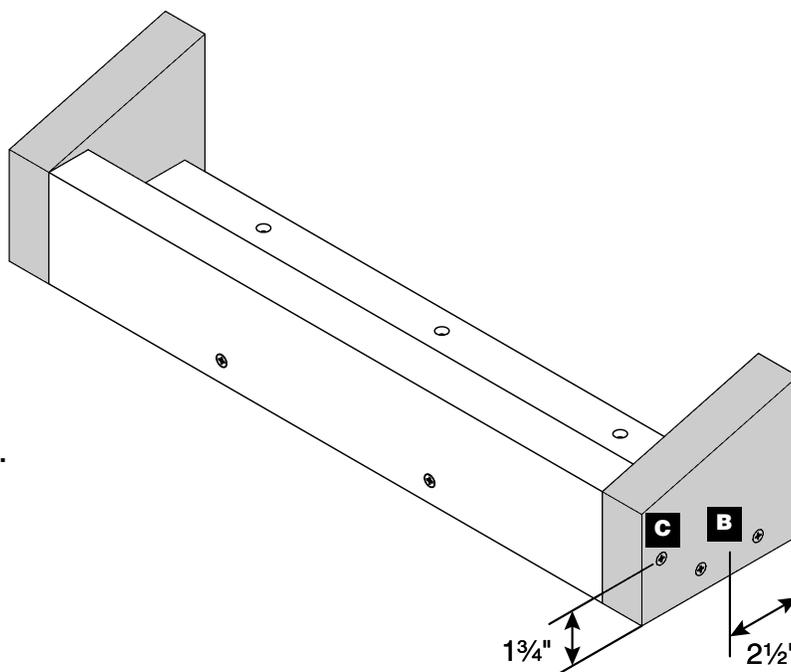



Repeat for other side mirroring screw locations.

SEE PAGE 4 FOR
HOLE PATTERNS

Items for STEP 4:

- (3) #8 x 2½" deck screws

Set Flower Box at desired location. Using the holes pre-drilled in Step 1 as a guide, predrill ⅛" holes. Secure using #8 x 2½" deck screws.

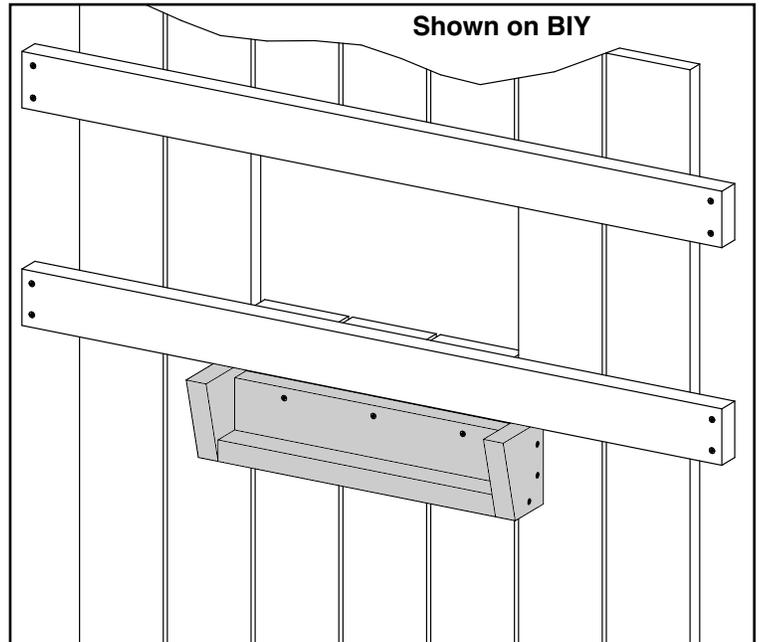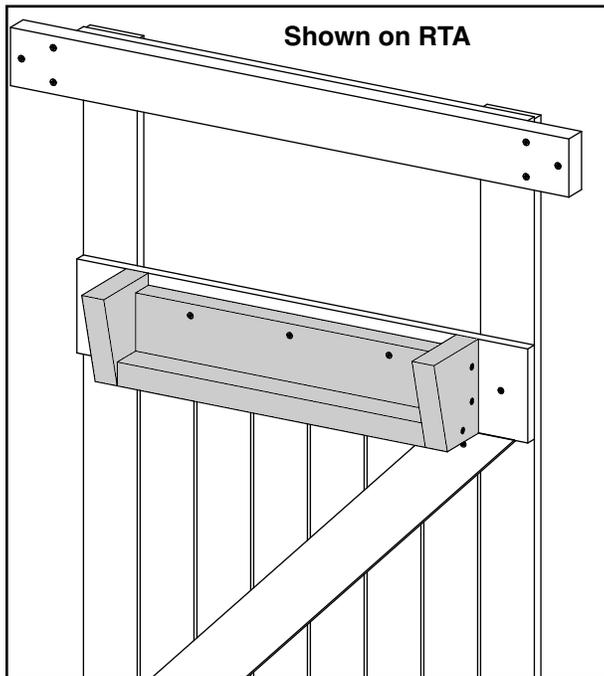


Note: You will want to locate flower box where there are thicker boards and the 2½" deck screw does not protrude through the backside.

Items for STEP 5:

- (1) 1" x 6" x 21½" board
- (5) #8 x 1½" deck screws

Attach 1" x 6" x 21½" board to the front of Flower Box as shown. Secure with #8 x 1½" deck screws.

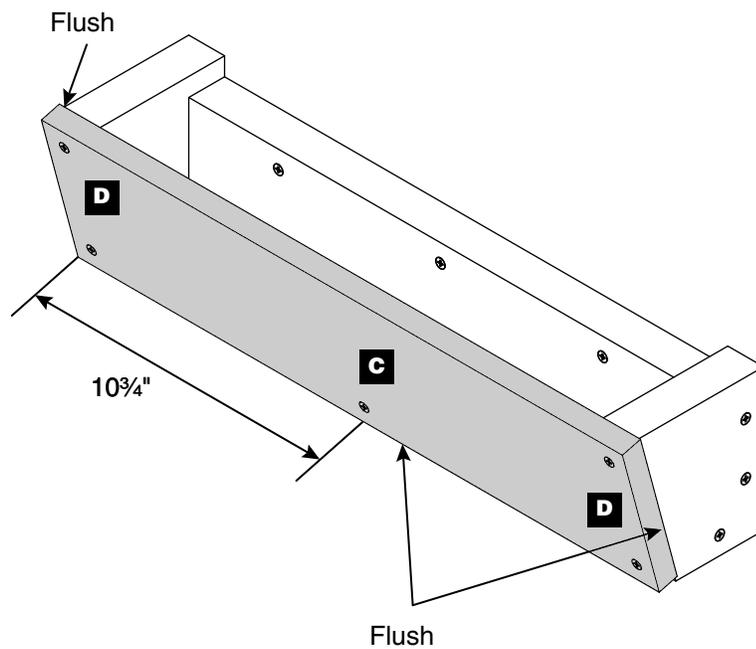

SEE PAGE 4 FOR
HOLE PATTERNS